

Switching Regulator Series

# Step-Down DC/DC Converter BD9A600MUV Evaluation Board

BD9A600MUV-EVK-001

## Description

This evaluation board has been developed for ROHM's synchronous buck DC/DC converter customers evaluating BD9A600MUV. While accepting a power supply of 2.7-5.5V, an output of 1.8V can be produced. The IC has internal 25mΩ high-side N-channel MOSFET and 25mΩ low-side N-channel MOSFET and a synchronization frequency is of 1MHz. A Soft Start circuit prevents in-rush current during startup. An EN pin allows for simple ON/OFF control of the IC to reduce standby current consumption. A MODE pin allows the user to select fixed frequency PWM mode or enables the Deep-SLLM control and the mode is automatically switched between the Deep-SLLM control and fixed frequency PWM mode. Include OCP (Over Current Protection) and SCP (Short Circuit Protection).

## Evaluation Board Operating Limits and Absolute Maximum Ratings (Ta=25°C)

Parameter	Symbol	Limit			Unit	Conditions
		MIN	TYP	MAX		
Supply Voltage	V <sub>CC</sub>	2.7	-	5.5	V	
Output Voltage / Current	V <sub>OUT</sub>	-	1.8	-	V	
	I <sub>OUT</sub>	-	-	6	A	

## Evaluation Board

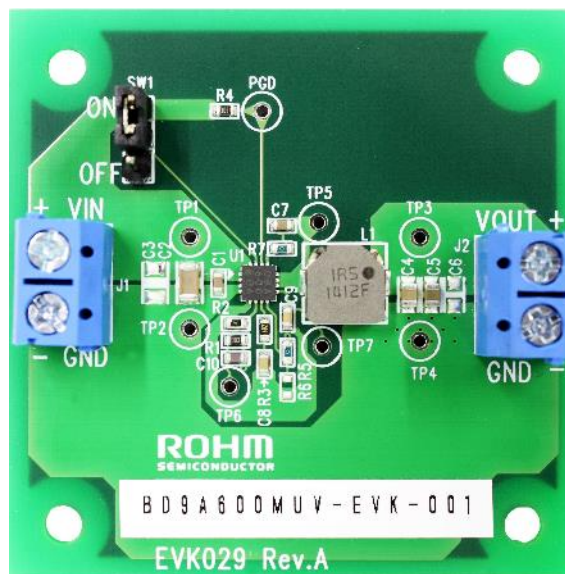


Figure 1. BD9A600MUV-EVK-001 Evaluation Board

## Operation Procedures

### 1. Necessary equipments

- (1) DC power-supply of 2.7V to 5.5V/6A
- (2) Maximum 6A load
- (3) DC voltmeter

### 2. Connecting the equipments

- (1) DC power-supply presets to 5.0V and then the power output turns off.
- (2) The max. load should be set at 6A and over it will be disabled.
- (3) Check Jumper pin of SW1 is short, between intermediate-terminal and OFF-side terminal.
- (4) Connect positive-terminal of power-supply to VIN+terminal and negative-terminal to GND-terminal with a pair of wires.
- (5) Connect load's positive-terminal to VOUT+terminal and negative-terminal to GND-terminal with a pair of wires.
- (6) Connect positive-terminal of DC voltmeter 1 to TP1 and negative-terminal to TP2 for input-voltage measurement.
- (7) Connect positive-terminal of DC voltmeter 2 to TP3 and negative-terminal to TP4 for output-voltage measurement.
- (8) DC power-supply output is turned ON.
- (9) IC is enable (EN) by shorting Jumper-pin of SW1 between intermediate-terminal and ON-side terminal.
- (10) Check DC voltmeter 2 displays 1.8V.
- (11) The load is enabled.
- (12) Check at DC voltmeter 1 whether the voltage-drop (loss) is not caused by the wire's resistance.

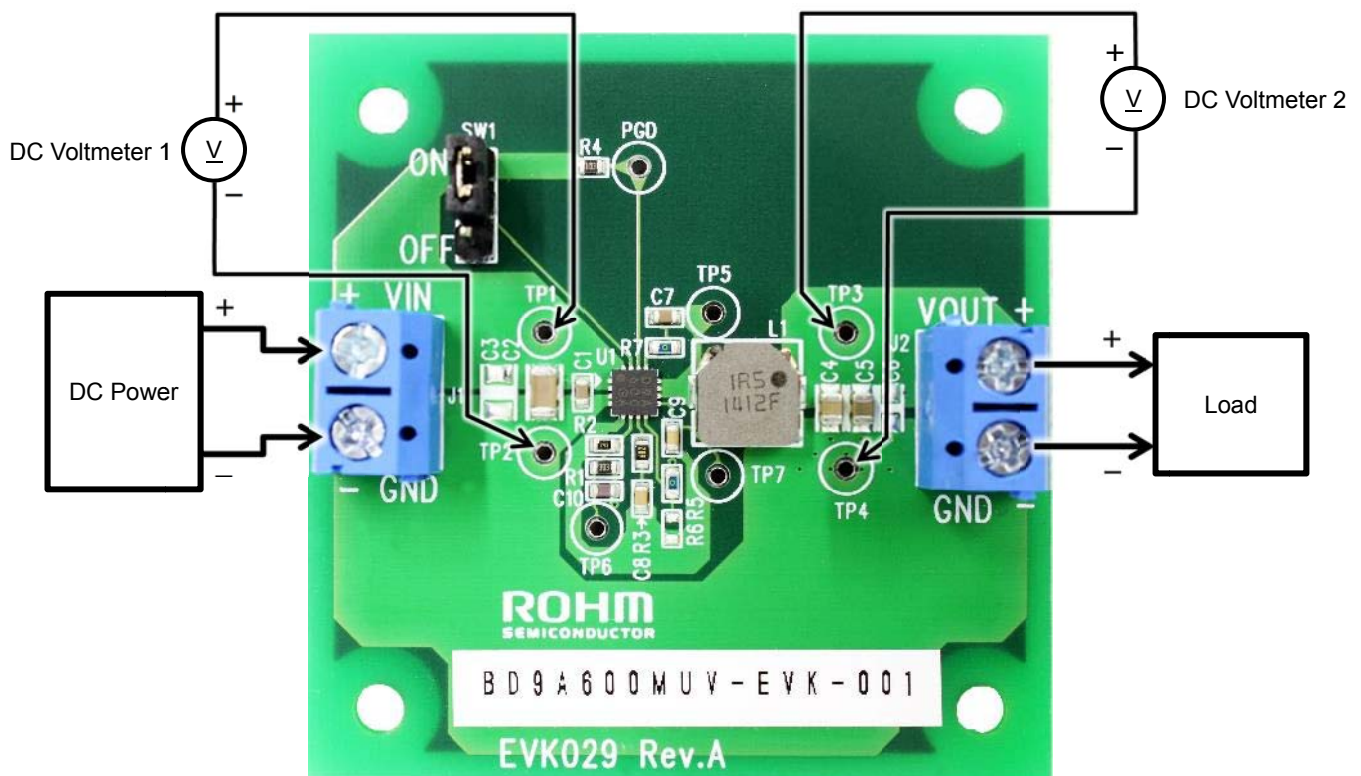


Figure 2. Connection Diagram

### Enable-Pin

To minimize current consumption during standby-mode and normal operation, Enable-mode can be switched by controlling EN pin(15pin) of the IC. Standby-mode is enabled by shorting Jumper-pin of SW1 between intermediate-terminal and OFF-side terminal and normal-mode operation by shorting between intermediate-terminal and ON-side terminal.

It also can be swithed between standby-mode and normal-mode operation by removing Jumper-pin and controlling the voltage between EN and GND-terminal. Standby-mode is enabled when the voltage of EN is under 0.5V, and normal-mode operation when it is over 2.0V.

Circuit Diagram

$V_{IN} = 2.7V \sim 5.5V$ ,  $V_{OUT} = 1.8V$

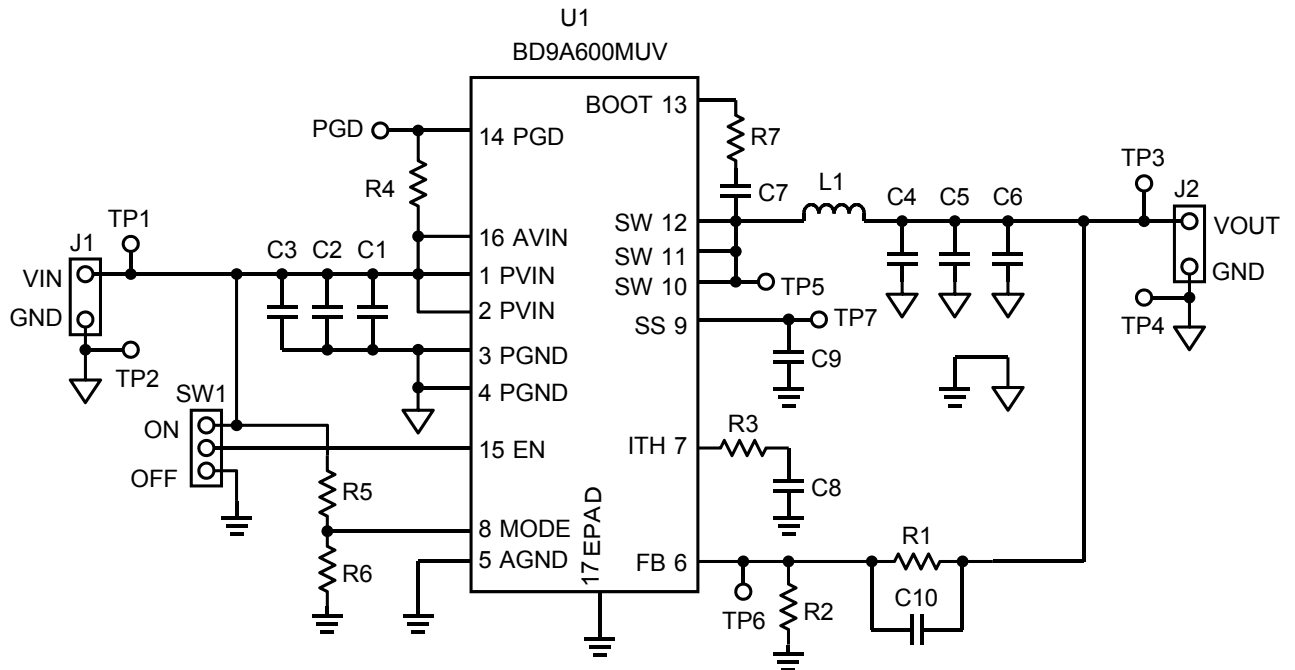


Figure 3. BD9A600MUV-EVK-001 Circuit Diagram

Bill of Materials

Count	Reference Designator	Type	Value	Description	Manufacturer Part Number	Manufacturer	Configuration (mm)
1	C1	Ceramic Capacitor	0.1μF	50V, B, ±10%	GRM188B31H104KA92D	MURATA	1608
1	C2	Ceramic Capacitor	10μF	16V, B, ±10%	GRM31CB31C106KA88L	MURATA	3216
0	C3	Ceramic Capacitor	-	Not installed	-	-	3216
2	C4, C5	Ceramic Capacitor	22μF	6.3V, B, ±20%	GRM21BB30J226ME38L	MURATA	2012
0	C6	Ceramic Capacitor	-	Not installed	-	-	2012
1	C7	Ceramic Capacitor	0.47μF	16V, B, ±10%	GRM188B31C474KA87	MURATA	1608
1	C8	Ceramic Capacitor	5600pF	50V, C0G, ±5%	GRM1885C1H562JA01	MURATA	1608
1	C9	Ceramic Capacitor	0.01μF	50V, B, ±10%	GRM188B11H103KA01D	MURATA	1608
1	C10	Ceramic Capacitor	100pF	50V, C0G, ±5%	GRM1885C1H101JA01	MURATA	1608
1	L1	Inductor	1.5μH	±30%, DCR=13mΩmax, 9.8A	FDS0630-H-1R5N	TOKO	7066
1	R1	Resistor	30kΩ	1/10W, 50V, ±1%	MCR03ERPF3002	ROHM	1608
1	R2	Resistor	24kΩ	1/10W, 50V, ±1%	MCR03ERPF2402	ROHM	1608
1	R3	Resistor	6.8kΩ	1/10W, 50V, ±1%	MCR03ERPF6801	ROHM	1608
1	R4	Resistor	10kΩ	1/10W, 50V, ±1%	MCR03ERPF1002	ROHM	1608
2	R5, R7	Resistor	0Ω	Jumper	MCR03ERPJ000	ROHM	1608
0	R6	Resistor	-	Not installed	-	-	1608
1	SW1	Pin header	-	2.54mm × 3 contacts	PH-1x03SG	USECONN	-
1	U1	IC	-	Buck DC/DC Converter	BD9A600MUV	ROHM	VQFN016V3030
2	J1, J2	Terminal Block	-	2 contacts, 15A, 14 to 22AWG	TB111-2-2-U-1-1	Alphaplus Connectors & Cables	-
1	-	Jumper	-	Jumper pin for SW1	MJ254-6BK	USECONN	-

Layout

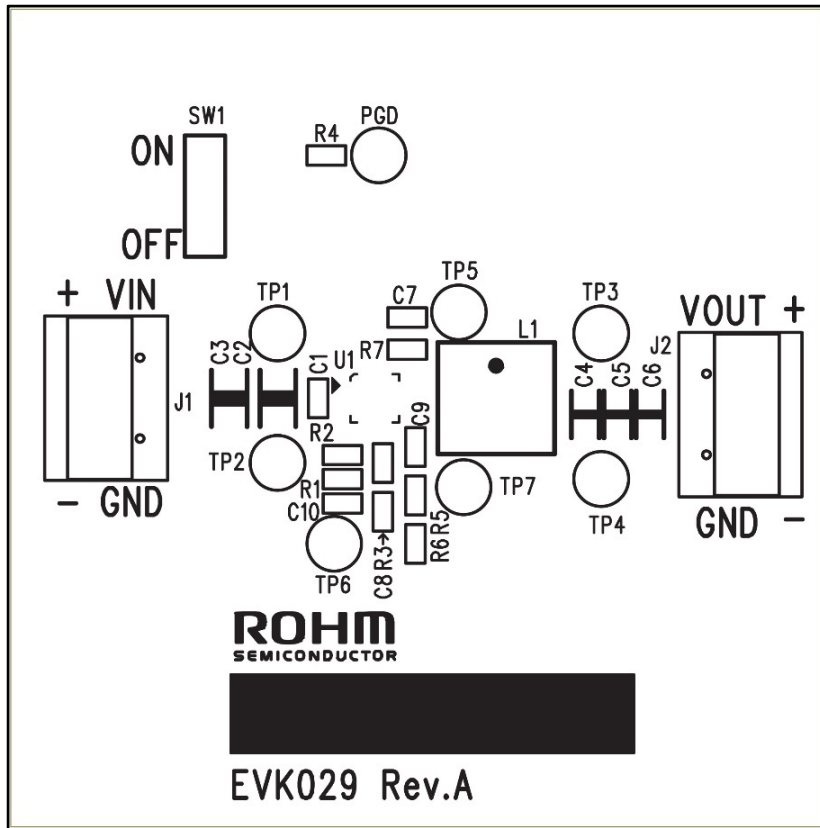


Figure 4. Top Silk Screen (Top view)

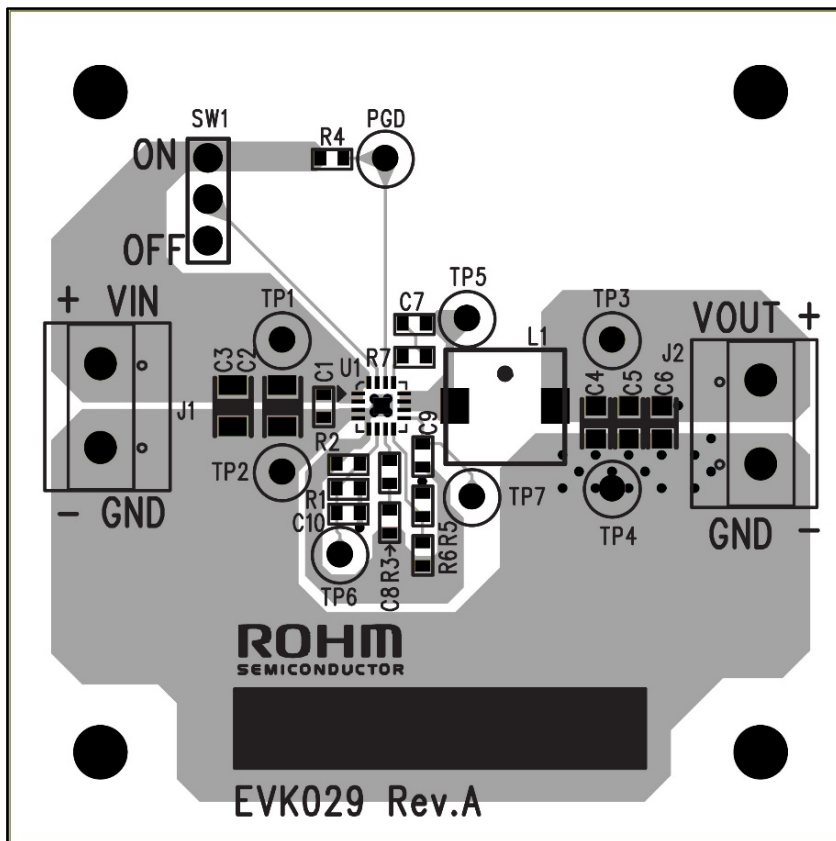


Figure 5. Top Silk Screen and Layout (Top view)

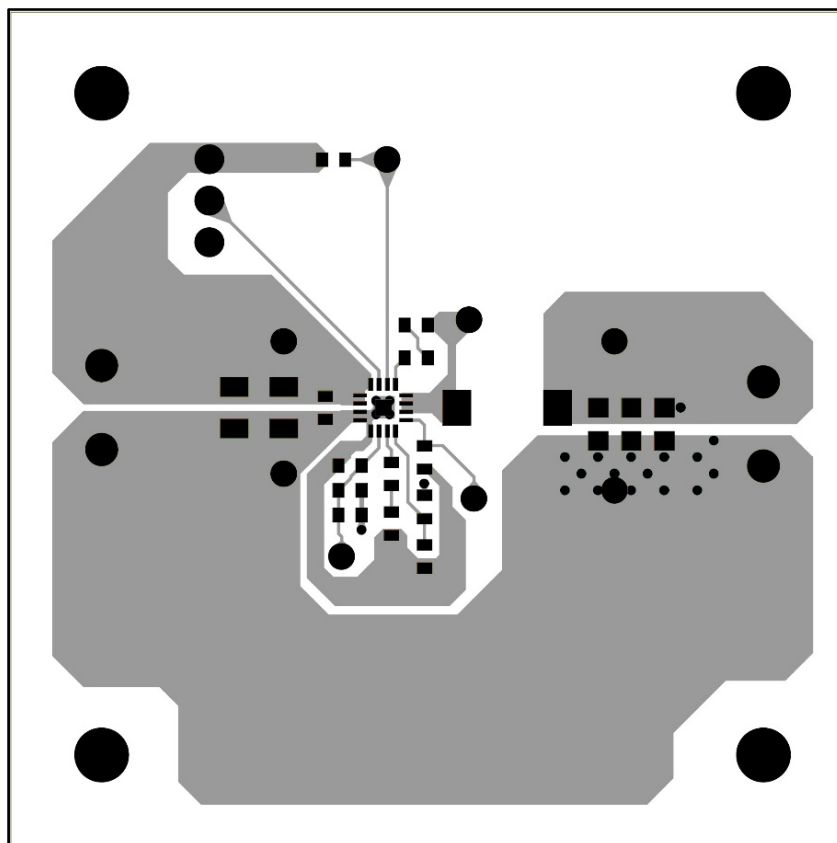


Figure 6. Top Side Layout (Top view)

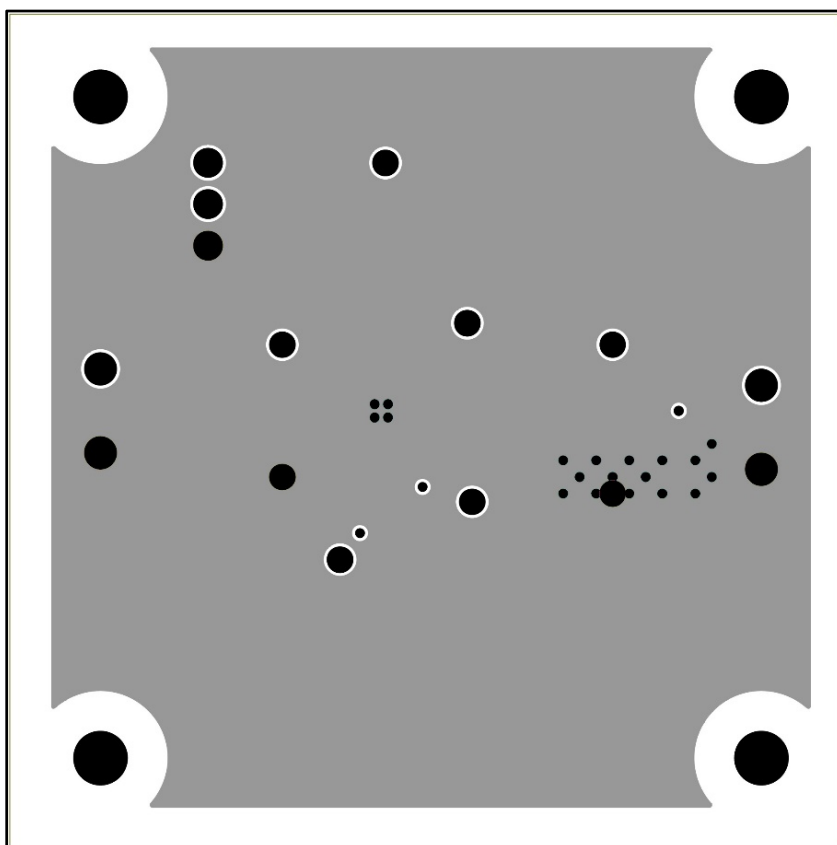


Figure 7. L2 Layout (Top view)

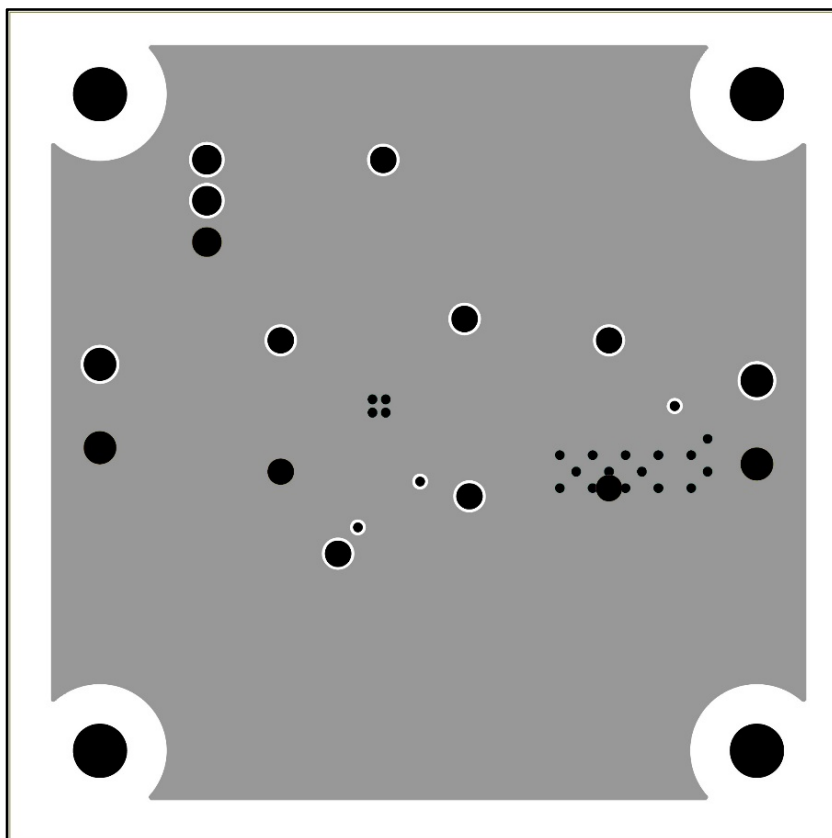


Figure 8. L3 Layout (Top view)

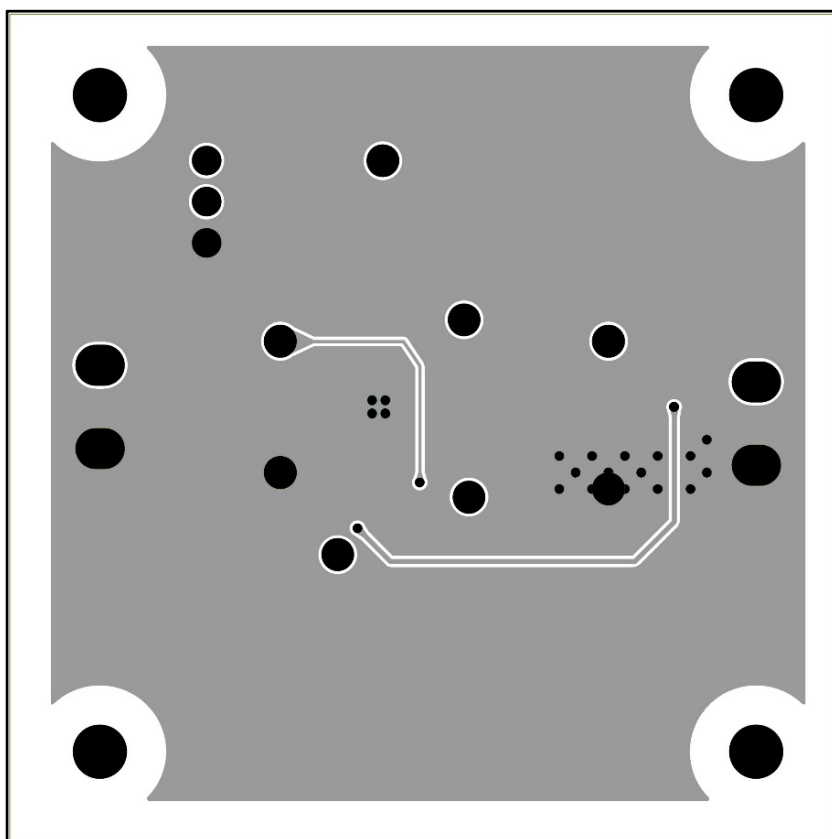


Figure 9. Bottom Side Layout (Top view)

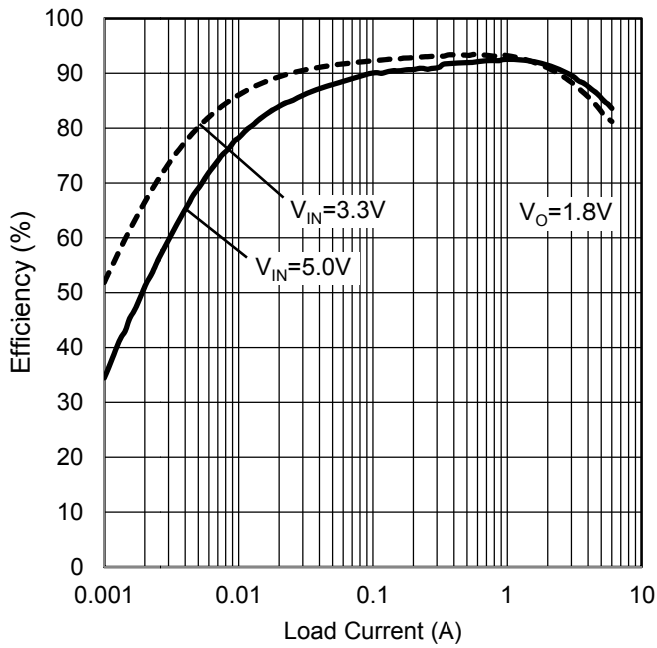


Figure 10. Efficiency vs Load Current

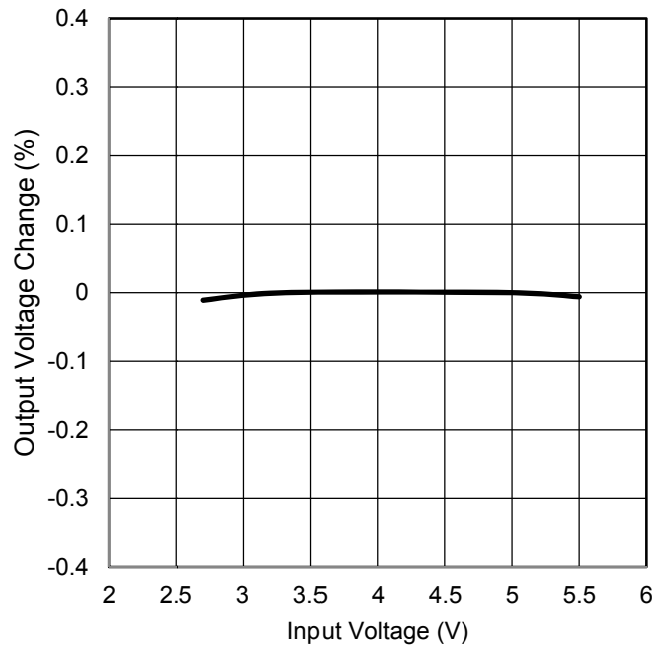


Figure 11. Line Regulation

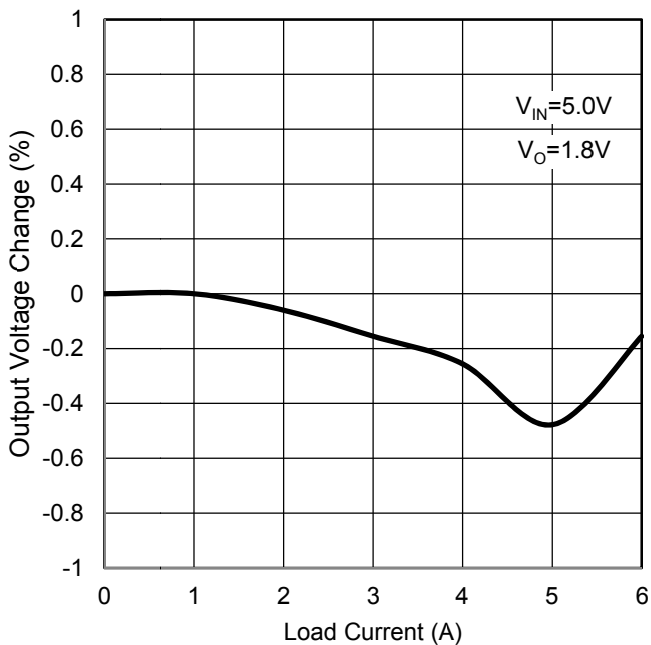


Figure 12. Load Regulation

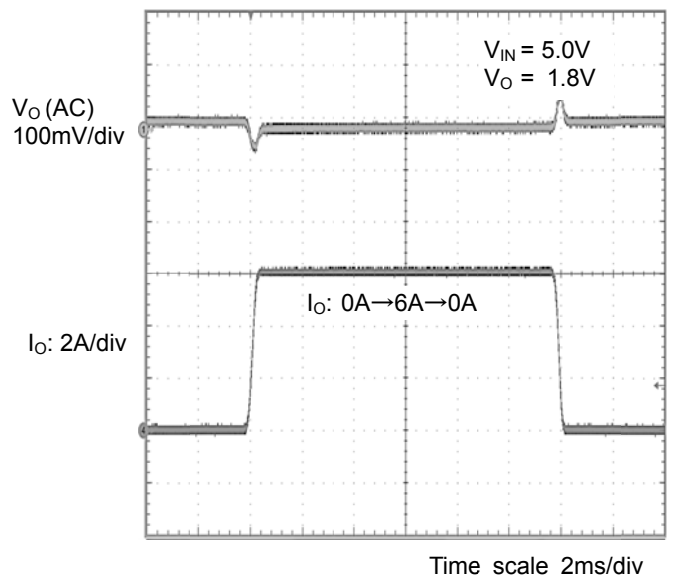


Figure 13. Load Transient Characteristics

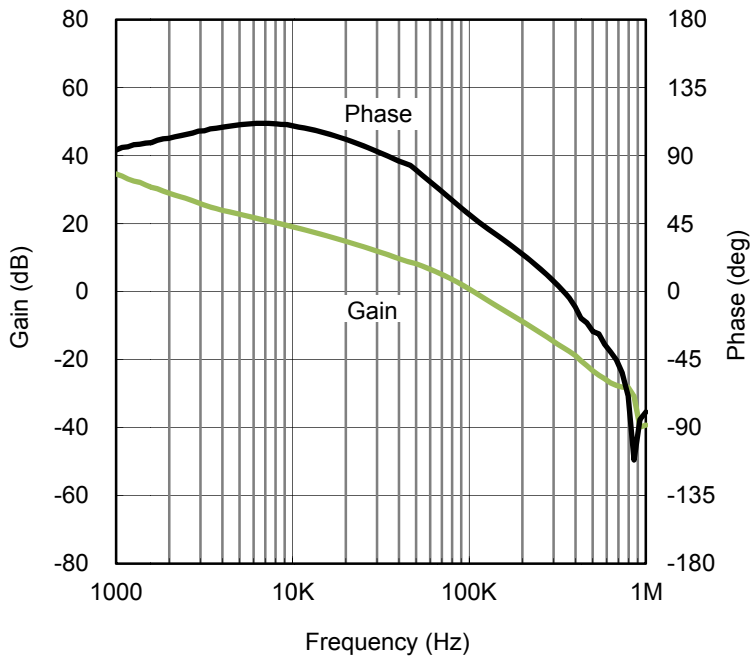


Figure 14. Loop Response  $V_{IN} = 5.0V$ ,  $V_O = 1.8V$ ,  $I_O = 1.0A$

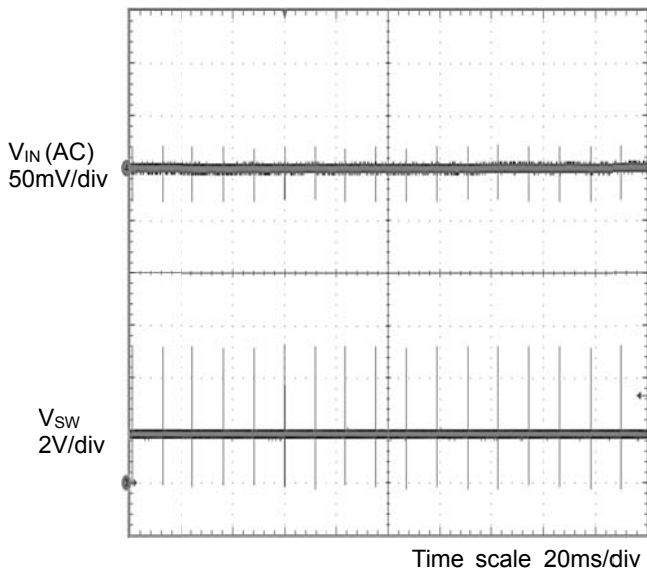


Figure 15. Input Voltage Ripple Wave  
 $V_{IN} = 5.0V$ ,  $V_O = 1.8V$ ,  $I_O = 0A$

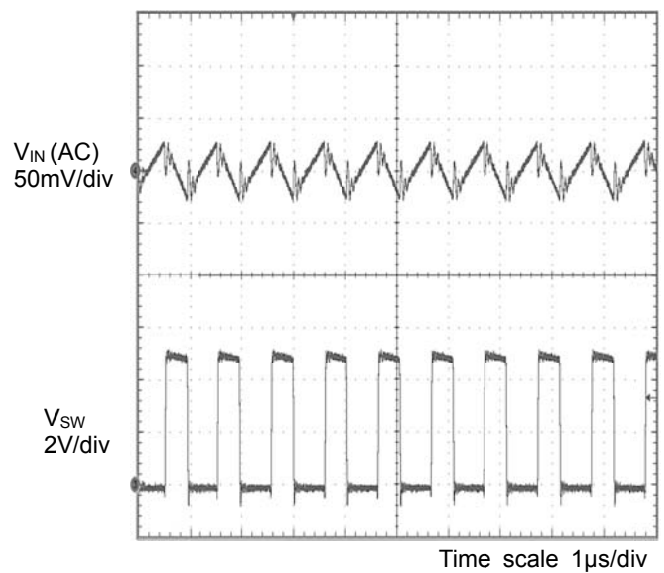


Figure 16. Input Voltage Ripple Wave  
 $V_{IN} = 5.0V$ ,  $V_O = 1.8V$ ,  $I_O = 6A$



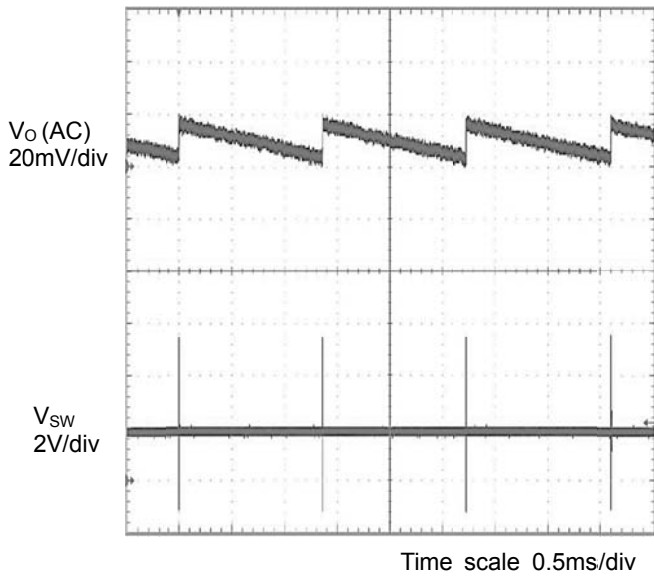


Figure 17. Output Voltage Ripple Wave  
 $V_{IN} = 5.0V, V_O = 1.8V, I_O = 0A$

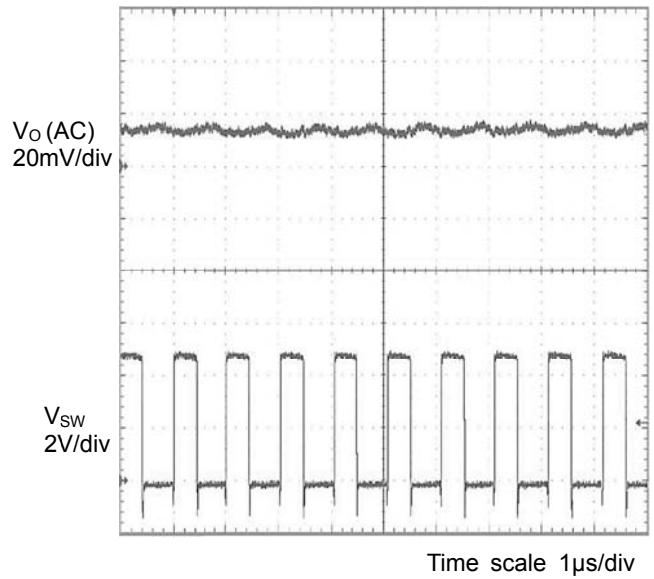


Figure 18. Output Voltage Ripple Wave  
 $V_{IN} = 5.0V, V_O = 1.8V, I_O = 6A$

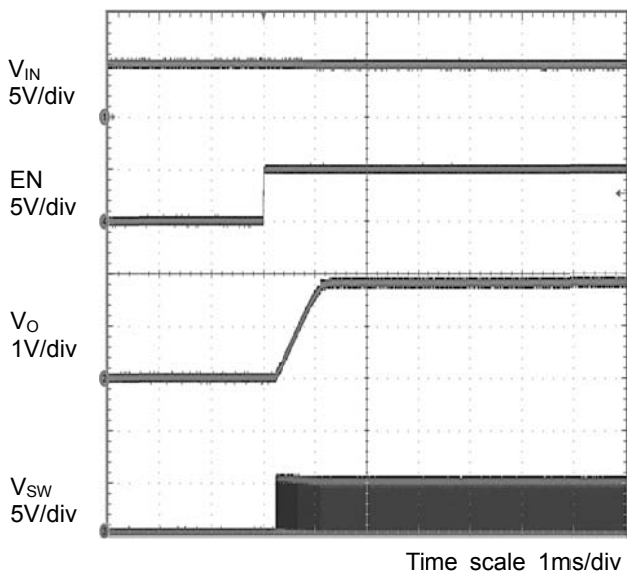


Figure 19. Start-up by EN  
 $V_{IN} = 5.0V, V_O = 1.8V$

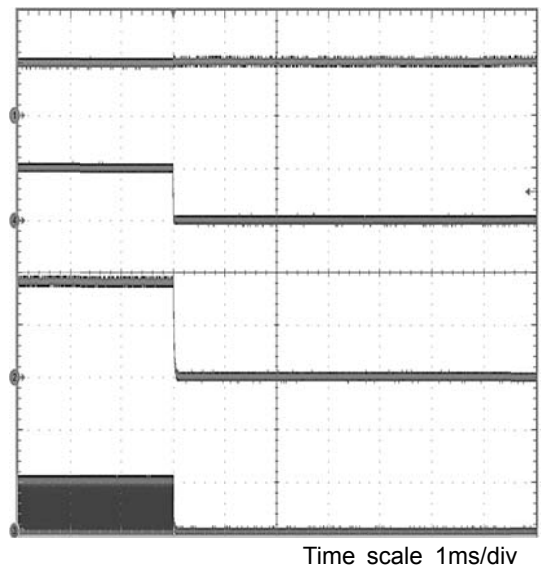


Figure 20. Power-down by EN  
 $V_{IN} = 5.0V, V_O = 1.8V$

## Notes

- 1) The information contained herein is subject to change without notice.
- 2) Before you use our Products, please contact our sales representative and verify the latest specifications :
- 3) Although ROHM is continuously working to improve product reliability and quality, semiconductors can break down and malfunction due to various factors.  
Therefore, in order to prevent personal injury or fire arising from failure, please take safety measures such as complying with the derating characteristics, implementing redundant and fire prevention designs, and utilizing backups and fail-safe procedures. ROHM shall have no responsibility for any damages arising out of the use of our Products beyond the rating specified by ROHM.
- 4) Examples of application circuits, circuit constants and any other information contained herein are provided only to illustrate the standard usage and operations of the Products. The peripheral conditions must be taken into account when designing circuits for mass production.
- 5) The technical information specified herein is intended only to show the typical functions of and examples of application circuits for the Products. ROHM does not grant you, explicitly or implicitly, any license to use or exercise intellectual property or other rights held by ROHM or any other parties. ROHM shall have no responsibility whatsoever for any dispute arising out of the use of such technical information.
- 6) The Products are intended for use in general electronic equipment (i.e. AV/OA devices, communication, consumer systems, gaming/entertainment sets) as well as the applications indicated in this document.
- 7) The Products specified in this document are not designed to be radiation tolerant.
- 8) For use of our Products in applications requiring a high degree of reliability (as exemplified below), please contact and consult with a ROHM representative : transportation equipment (i.e. cars, ships, trains), primary communication equipment, traffic lights, fire/crime prevention, safety equipment, medical systems, servers, solar cells, and power transmission systems.
- 9) Do not use our Products in applications requiring extremely high reliability, such as aerospace equipment, nuclear power control systems, and submarine repeaters.
- 10) ROHM shall have no responsibility for any damages or injury arising from non-compliance with the recommended usage conditions and specifications contained herein.
- 11) ROHM has used reasonable care to ensure the accuracy of the information contained in this document. However, ROHM does not warrant that such information is error-free, and ROHM shall have no responsibility for any damages arising from any inaccuracy or misprint of such information.
- 12) Please use the Products in accordance with any applicable environmental laws and regulations, such as the RoHS Directive. For more details, including RoHS compatibility, please contact a ROHM sales office. ROHM shall have no responsibility for any damages or losses resulting from non-compliance with any applicable laws or regulations.
- 13) When providing our Products and technologies contained in this document to other countries, you must abide by the procedures and provisions stipulated in all applicable export laws and regulations, including without limitation the US Export Administration Regulations and the Foreign Exchange and Foreign Trade Act.
- 14) This document, in part or in whole, may not be reprinted or reproduced without prior consent of ROHM.



Thank you for your accessing to ROHM product informations.  
More detail product informations and catalogs are available, please contact us.

## ROHM Customer Support System

<http://www.rohm.com/contact/>