

# AC/DC Convertor Non-Isolated PWM type, 7.2 W (12 V/0.6 A) BM2PAB1Y-Z Evaluation Board

User's Guide

#### < High Voltage Safety Precautions >

Please note that this document covers only the BM2PAB1Y-Z evaluation board (BM2PAB1Y-EVK-001) and its functions. For additional information, please refer to the datasheet.

### To ensure safe operation, please carefully read all precautions before handling the evaluation board



Depending on the configuration of the board and voltages used,

#### Potentially lethal voltages may be generated.

Therefore, please make sure to read and observe all safety precautions described in the red box below.

#### **Before Use**

- [1] Verify that the parts/components are not damaged or missing (i.e. due to the drops).
- [2] Check that there are no conductive foreign objects on the board.
- [3] Be careful when performing soldering on the module and/or evaluation board to ensure that solder splash does not occur.
- [4] Check that there is no condensation or water droplets on the circuit board.

#### **During Use**

- [5] Be careful to not allow conductive objects to come into contact with the board.
- [6] Brief accidental contact or even bringing your hand close to the board may result in discharge and lead to severe injury or death.

Therefore, DO NOT touch the board with your bare hands or bring them too close to the board. In addition, as mentioned above please exercise extreme caution when using conductive tools such as tweezers and screwdrivers.

- [7] If used under conditions beyond its rated voltage, it may cause defects such as short-circuit or, depending on the circumstances, explosion or other permanent damages.
- [8] Be sure to wear insulated gloves when handling is required during operation.

#### **After Use**

- [9] The ROHM Evaluation Board contains the circuits which store the high voltage. Since it stores the charges even after the connected power circuits are cut, please discharge the electricity after using it, and please deal with it after confirming such electric discharge.
- [10] Protect against electric shocks by wearing insulated gloves when handling.

This evaluation board is intended for use only in research and development facilities and should by handled only by qualified personnel familiar with all safety and operating procedures.

We recommend carrying out operation in a safe environment that includes the use of high voltage signage at all entrances, safety interlocks, and protective glasses.

www.rohm.com HVB01E



#### AC/DC Converter

## Non-Isolated Buck Convertor 12 V 7.2 W Output BM2PAB1Y-Z Evaluation Board

#### BM2PAB1Y-EVK-001

#### **Feature**

- (1) Adjustable Output Voltage with External Resistor
- (2) Low Switching Loss and Low EMI by frequency 25 kHz
- (3) Internal Start up Circuit 730 V(peak)
- (4) Internal Super Junction FET 730 V(peak) (Ron = 1.2 Ω)
- (5) Internal Current Sense Resistor (Detection Current 1.76 A)
- (6) Contributes to Low EMI by Internal Hopping Function



Figure 1. BM2PAB1Y-EVK-001

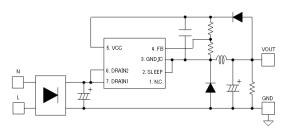


Figure 2. BM2PAB1Y-EVK-001 Simple Schematic

#### Specification

Table 1. Input Range

Parameter	Min	Тур	Max	Units	Conditions
Input Voltage Range	90	230	264	Vac	
Input Frequency Range	47	50 / 60	63	Hz	
Operating Temperature	-10	25	+65	°C	

Table 2. Evaluation board specification

These are representative values and not a guarantee of the characteristics, unless stated otherwise use V<sub>IN</sub> = 230 Vac, I<sub>OUT</sub> = 0.6 A, Ta = 25 ° C.

Parameter	Min	Тур	Max	Units	Conditions
Output Voltage	11.04	12.0	12.6	V	
Output Maximum Power	-	-	7.2	W	
Output Current Range (Note 1)	0	-	0.6	Α	
No Load Power Consumption	-	120	-	mW	I <sub>OUT</sub> = 0 A
Efficiency	-	82	-	%	
Output Ripple Voltage (Note 2)	-	-	100	mVpp	

(Note 1) Adjust the operating time so that surface temperature of no component exceeds 105  $^{\circ}$  C

(Note 2) Do not consider spike nois

#### **Operation Procedure**

- 1. Operation equipment
  - (1) AC power supply 90 Vac to 264 Vac, 15 W or more
  - (2) Electronic Load capacity 0.6 A
  - (3) Multimeter
- 2. Connection Instruments
  - (1) Turn off each power supply and connect the measuring instrument as shown below.
  - (2) Turn on the power supply setting between 90 Vac to 264 Vac
  - (3) Turn on the electrical load setting between 0 to 0.6 A.
  - (4) Connect the multimeter directly to the output and check the voltage by sensing.



Figure 3. Connection Circuit

#### Circuit

 $V_{\text{IN}}$  = 90 to 264 Vac,  $V_{\text{OUT}}$  = 12 V

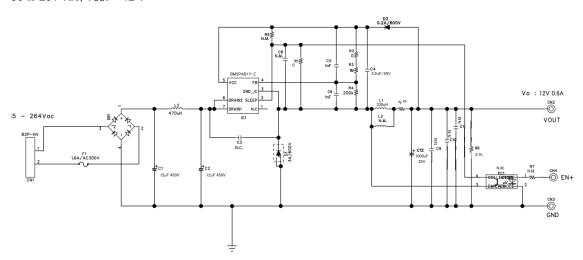


Figure 4. Application Circuit

#### **BOM List**

Item		Specifications	Parts name	Manufacture	
	C1	12 μF, 450 V	UCY2W120MP01TD	NICHICON	
	C2	12 μF, 450 V	UCY2W120MP01TD	NICHICON	
	C3	-	NON MOUNTED	-	
	C4	2.2 μF, 50 V	UMK316B7225KL-T	TAIYO YUDEN	
	C5	1000 pF, 100 V	HMK107B7102KA-T	TAIYO YUDEN	
Capacitor	C6	1000 pF, 100 V	HMK107B7102KA-T	TAIYO YUDEN	
	C8	-	NON MOUNTED	-	
	C9	-	NON MOUNTED	-	
	C10	-	NON MOUNTED	-	
	C11	-	NON MOUNTED	-	
	C12	1000 μF, 25 V	25ZLJ1000M10x20	RUBYCON	
Connector	CN1	-	B02P-NV	JST	
	D1	FRD, 3 A, 600 V	RFN3BM6S	ROHM	
Diode	D2	FRD, 0.2 A, 600 V	RFU02VSM6S	ROHM	
	DB1	1 A, 800 V	D1UBA80	SHINDENGEN	
Fuse	F1	1.6 A, 300 V	36911600000	LITTELFUSE	
IC	IC1	-	BM2PAB1Y-Z	ROHM	
Jumper	J1	0 Ω	MCR18EZPJ000	ROHM	
	L1	330 μΗ	RFS1317-334KL	COIL CRAFT	
Inductor	L2	-	NON MOUNTED	-	
	L3	470 μΗ	7447462471	WURTH ELECTRONIK	
Photo Coupler	PC 1	-	NON MOUNTED	-	
PCB	PCB1	-	PCB0178	ROHM	
	R1	-	SHORT	-	
Resistor	R2	-	SHORT	-	
	R3	1 ΜΩ	MCR03EZPFX1004	ROHM	
	R4	200 kΩ	MCR03EZPFX2003	ROHM	
	R6	2.7 kΩ	MCR03EZPJ2701	ROHM	
	R7	-	NON MOUNTED	-	
	R9	-	NON MOUNTED	-	

#### Layout

Size 70 mm x 30 mm

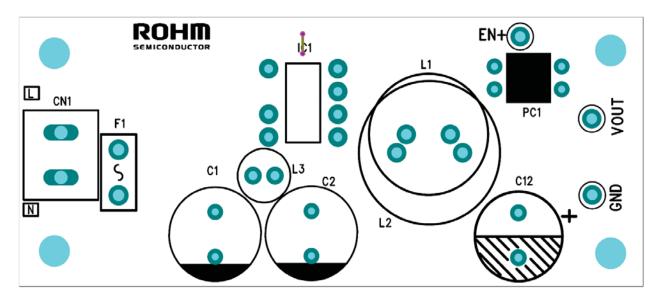


Figure 5. Top Silkscreen (Top view)

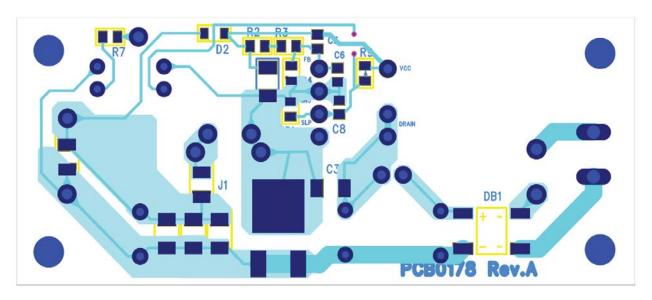


Figure 6. Bottom Layout (Bottom view)

#### **BM2Pxx1Y Overview**

#### **Features**

- PWM Current Mode
- Built-in Frequency Hopping Function
- Burst Operation at Light Load
- Built-in 730 V(peak) Starter Circuit
- Built-in 730 V(peak) Super Junction MOSFET
- VCC UVLO (Under Voltage Lockout)
- VCC OVP (Over Voltage Protection)
- Over Current Limiter Function per Cycle
- Soft Start Function
- Sleep Mode

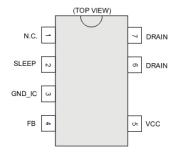


Figure 7. Pin Configuration

#### Line Up

Model Name	Switching Frequency	Frequency Reduction	OCP Current
BM2PAA1Y-Z	65 kHz	0	1.76 A
BM2PAB1Y-Z	25 kHz	-	1.70 A
BM2PDA1Y-Z	65 kHz	0	0.93 A
BM2PDB1Y-Z	25 kHz	-	0.93 A

#### **Key Specifications**

Operating Power Supply Voltage Range

VCC 11.10 V to 26.00 V DRAIN 730 V(peak) (Max) Operating Current (Normal): 650 µA (Typ) Operating Current (Burst): 350 µA (Typ) Operating Current (Sleep): 65 µA (Typ) Switching Frequency: 25 kHz / 65 kHz (Typ) -40 °C to +105 °C **Operation Temperature:** MOSFET ON Resistance: 1.2 Ω (Typ)

#### **Application**

Washing machine, Air conditioner, Other white goods

 Package
 W(Typ) x D(Typ) x H(Typ)

 DIP7K
 9.27 mm x 6.35 mm x 8.63 mm

Pitch 2.54 mm

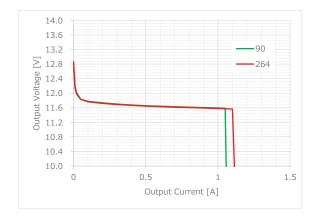


Table 3. BM2Pxx1Y-Z Pin Description

No.	Name	I/O	Function
1	N.C.	-	Non connection
2	SLEEP	I	Sleep/Normal modes witching pin
3	GND_IC	I/O	GND pin
4	FB	I	Output voltage feedback pin
5	VCC	I	Input voltage pin
6	DRAIN	I/O	MOSFET drain pin
7	DRAIN	I/O	MOSFET drain pin

#### **Measurement Data**

#### **Constant Load Regulations**



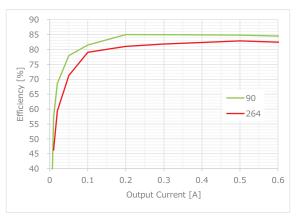


Figure 8. IOUT vs. VOUT

Figure 9. IOUT vs. Efficiency

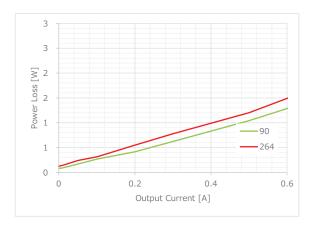


Figure 10. IOUT vs. Power Loss

#### **Measurement Data - Continued**

Waveform

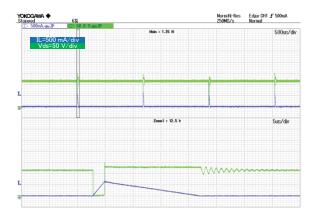


Figure 11. Vds and IL VIN = 90 Vac, IOUT = 0 A

Figure 12. Vds and IL VIN = 264 Vac, IOUT = 0 A

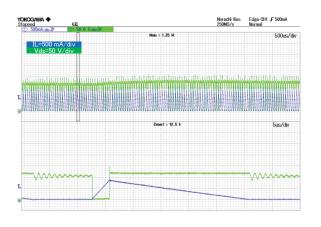


Figure 13. Vds and IL VIN = 90 Vac, IOUT = 0.3 A

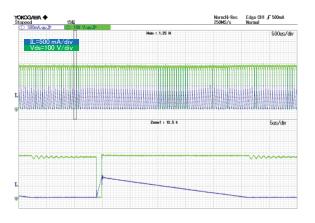


Figure 14. Vds and IL VIN = 264 Vac, IOUT = 0.3 A

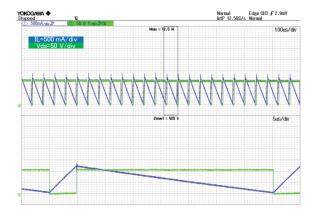


Figure 15. Vds and IL VIN = 90 Vac, IOUT = 0.6 A

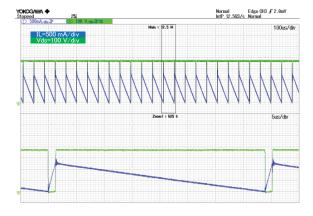


Figure 16. Vds and IL VIN = 264 Vac, IOUT = 0.6 A

#### **Measurement Data - Continued**

Waveform (Start Up)



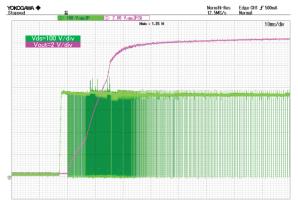
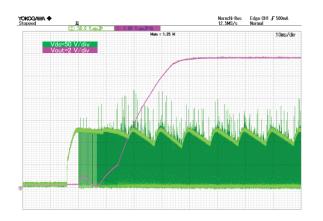


Figure 17. Vds and Vout VIN = 90 Vac, IOUT = 0 A

Figure 18. Vds and Vout VIN = 264 Vac, IOUT = 0 A




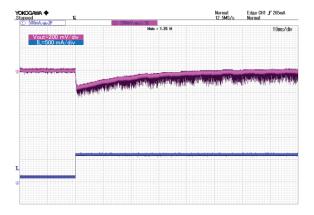




Figure 20. Vds and Vout VIN = 264 Vac, IOUT = 0.6 A

#### **Measurement Data - Continued**

Waveform (Load Response)



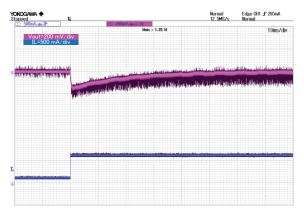
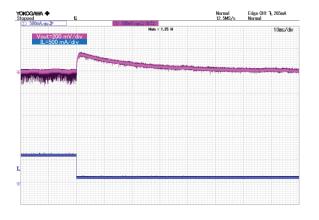



Figure 21. lout and Vout VIN = 90 Vac, IOUT = 0.1 A to 0.6 A

Figure 22. lout and Vout VIN = 264 Vac, IOUT = 0.1 A to 0.6 A





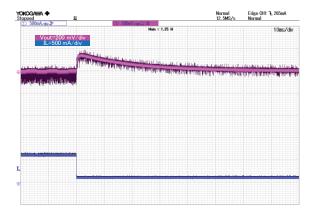
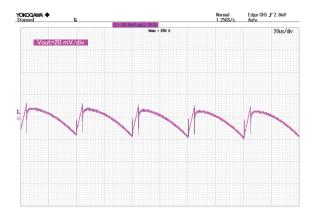


Figure 24. lout and Vout VIN = 264 Vac, IOUT = 0.6 A to 0.1 A

#### **Measurement Data - Continued**

Waveform (Ripple Voltage)



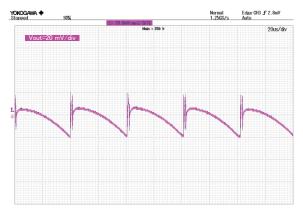



Figure 25. Vout Ripple Voltage (5 MHz Filter) VIN = 90 Vac, IOUT = 0.6 A

Figure 26. Vout Ripple Voltage (5MHz filter) VIN = 264 Vac, IOUT = 0.6 A


#### Operation Temperature

Condition lout=0.6 A. 20 min


#### VIN=90 Vac

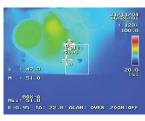

IC 51.0 °C




Diode 58.2 °C




Inductor 53.7 °C


#### VIN= 264 Vac

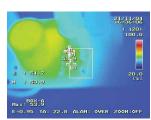

IC 53.9 °C



Diode 61.6 °C



Inductor 60.4 °C

Figure 27. Each device Temperature with maximum output current

Consider selecting parts after checking the temperature range of the parts used.

#### **Measurement Data - Continued**

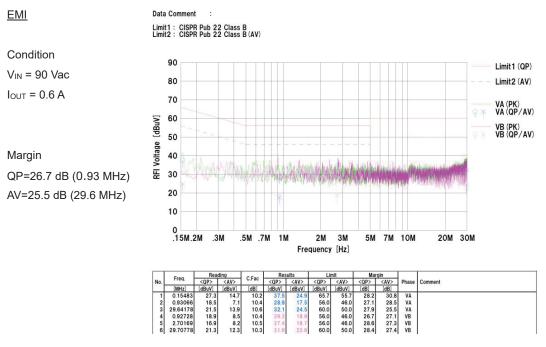


Figure 28. Conduction Noise VIN = 90 Vac

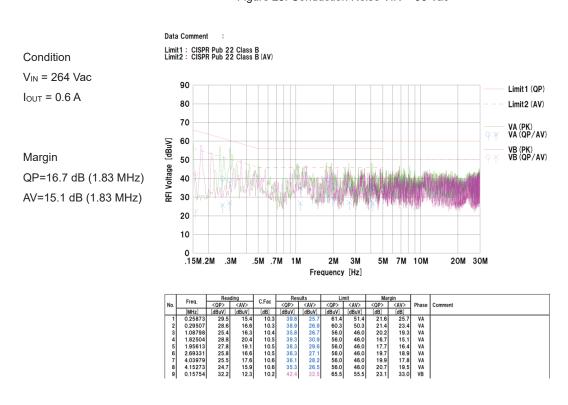


Figure 29. Conduction Noise VIN = 264 Vac

#### **Revision History**

Date	Rev.	Changes	
Mar.2021	001	New Release	
Nov.2021	002	Maximum Output Current =0.833 A->0.6 A Maximum Output Power=10 W->7.2W OCP Detection Current =2.0 A -> 1.76 A FET Withstand Voltage=650 V-> 730 V(peak)	

#### Notes

- 1) The information contained herein is subject to change without notice.
- Before you use our Products, please contact our sales representative and verify the latest specifications:
- 3) Although ROHM is continuously working to improve product reliability and quality, semiconductors can break down and malfunction due to various factors. Therefore, in order to prevent personal injury or fire arising from failure, please take safety measures such as complying with the derating characteristics, implementing redundant and fire prevention designs, and utilizing backups and fail-safe procedures. ROHM shall have no responsibility for any damages arising out of the use of our Poducts beyond the rating specified by ROHM.
- 4) Examples of application circuits, circuit constants and any other information contained herein are provided only to illustrate the standard usage and operations of the Products. The peripheral conditions must be taken into account when designing circuits for mass production.
- 5) The technical information specified herein is intended only to show the typical functions of and examples of application circuits for the Products. ROHM does not grant you, explicitly or implicitly, any license to use or exercise intellectual property or other rights held by ROHM or any other parties. ROHM shall have no responsibility whatsoever for any dispute arising out of the use of such technical information.
- 6) The Products specified in this document are not designed to be radiation tolerant.
- 7) For use of our Products in applications requiring a high degree of reliability (as exemplified below), please contact and consult with a ROHM representative: transportation equipment (i.e. cars, ships, trains), primary communication equipment, traffic lights, fire/crime prevention, safety equipment, medical systems, servers, solar cells, and power transmission systems.
- 8) Do not use our Products in applications requiring extremely high reliability, such as aerospace equipment, nuclear power control systems, and submarine repeaters.
- 9) ROHM shall have no responsibility for any damages or injury arising from non-compliance with the recommended usage conditions and specifications contained herein.
- 10) ROHM has used reasonable care to ensure the accuracy of the information contained in this document. However, ROHM does not warrants that such information is error-free, and ROHM shall have no responsibility for any damages arising from any inaccuracy or misprint of such information.
- 11) Please use the Products in accordance with any applicable environmental laws and regulations, such as the RoHS Directive. For more details, including RoHS compatibility, please contact a ROHM sales office. ROHM shall have no responsibility for any damages or losses resulting non-compliance with any applicable laws or regulations.
- 12) When providing our Products and technologies contained in this document to other countries, you must abide by the procedures and provisions stipulated in all applicable export laws and regulations, including without limitation the US Export Administration Regulations and the Foreign Exchange and Foreign Trade Act.
- 13) This document, in part or in whole, may not be reprinted or reproduced without prior consent of ROHM.



Thank you for your accessing to ROHM product informations. More detail product informations and catalogs are available, please contact us.

#### **ROHM Customer Support System**

http://www.rohm.com/contact/